

AstroAI 75 PSI Digital Tire Pressure Gauge Manual

Thank you for purchasing the 75 PSI Pencil Tire Pressure Gauge from AstroAI. For optimal performance and safety, please read and follow all of the instructions below before operating the device. Please keep this manual for future reference. We hope you enjoy your new Tire Gauge! If you experience the need for any kind of help or support from our Customer Service team, you are welcome to contact us with your question via support@astroai.com. Thanks again!

WARNING

- Do not use this product for applications outside of its intended use
- Read and follow all instructions before use

INSTRUCTIONS

1. Place the nozzle of the tire pressure gauge on the tire valve you wish to measure. Press firmly to ensure a good seal and prevent air from escaping.
2. Hold the gauge on the valve until a seal has formed and the measurement has been taken. It should only take a second if you have a good seal.
3. Remove the gauge from the valve stem.
4. To remove air, use the deflation stem on the opposite side of the nozzle head.

SPECIFICATIONS

- Range: 0-75 PSI; 0-5.5 Bar; 0-550 kPa
- 4-sided ABS Indicator Bar

HELPFUL HINTS

In order to get a strong seal, place the nozzle directly onto the tire valve. Putting the gauge on the nozzle from an angle could result in an inaccurate reading. Once the gauge is placed, firmly press the gauge straight down.

1 Year Warranty Limited Warranty From AstroAI

Each AstroAI tire gauge will be free from defects in material and workmanship. This warranty does not cover damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling, including normal wear and tear of mechanical components. This warranty covers the original purchaser only and is not transferable.

Questions or Concerns? We're happy to help!

support@astroai.com

AstroAI always wants to provide our customers with excellent products as well as customer service. To know more about us, please visit astroai.com.