

AstroAI 100PSI Tire Inflator with Pressure Gauge

Thank you for purchasing the AstroAI Tire Pressure Gauge. If you experience the need for any kind of help or support from our Customer Service team, you are welcome to contact us with your question via support@astroai.com. Thanks again!

Instructions

Use the AstroAI Tire Inflator with Pressure Gauge to inflate tires to the optimal pressure level.

Inflate Tires Using an Air Compressor

1. Thread one of the NPT connectors to the bottom of the tire gauge.
2. Connect the AstroAI Inflator Gauge to an air compressor using the NPT connector.
3. Press the Air Bleed Valve/Reset Button to ensure the gauge is set to Zero.
4. Connect an Air Chuck to the rubber hose. Use the chuck to connect to the tire valve.
5. Fill by pressing the Valve Controller to desired pressure level.
6. Release excess air using the Air Bleed Valve/Reset Button.

Specifications

Inflation Range: 0-100 PSI

Display Resolution: 1 PSI

Measurement Units: PSI

Large 2.5" Dial & Translucent Dial

Heavy-duty inflatable chuck

Compatibility: NPT air compressor connector

Package Contents

1 x AstroAI Tire **Pressure** Gauge

1 x User Manual

4 x Valve Caps

1 x ¼" NPT Steel Fitting

1 x Valve core tool

1 x Thread Seal Tape Roll

3 Year Warranty Limited Warranty From AstroAI

Each AstroAI Inflator Gauge will be free from defects in material and workmanship. This warranty does not cover damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling. This warranty covers the original purchaser only and is not transferable.

Questions or Concerns? We're happy to help!

support@astroai.com.

AstroAI always wants to provide our customers with excellent products as well as customer service. To know more about us, please visit astroai.com.