

Thank you for purchasing the AstroAI 120 PSI Commercial Grade Dual Head Tire Inflator Gauge. Inflate duallies with extreme ease and without having to continually check pressure and then adjust. We hope you enjoy your new Tire Inflator Gauge. If you have any questions or concerns about your new product, you are welcome to contact us with your question via support@astroai.com.

Inflator Gauge Diagram

1. Valve Controller
2. ¼" NPT Threaded Female Connection
3. 15" Rubber Hose
4. Pressure Display
5. Dual Head Valve

Instructions

Use the AstroAI Tire Inflator Gauge to inflate tires to the optimal pressure level.

Inflate Tires Using an Air Compressor

1. Connect the AstroAI Inflator Gauge to an air compressor using the ¼" NPT connector.
2. Use the dual head chuck to connect to the tire valve.
3. Fill by pressing the Valve Controller to desired pressure level.

Specifications

Inflation Range: 10-120 PSI

Accuracy: 2-3%

Measurement Units: PSI, KPA

Compatibility: NPT air compressor connector

Package Contents

1 x AstroAI Tire Inflator Gauge

1 x User Manual

3 Year Warranty Limited Warranty From AstroAI

Each AstroAI Inflator Gauge Diagram will be free from defects in material and workmanship.

This warranty does not cover damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling. This warranty covers the original purchaser only and is not transferable.

Questions or Concerns? We're happy to help!

support@astroai.com.

AstroAI always wants to provide our customers with excellent products as well as customer service. To know more about us, please visit astroai.com.